
Epson TM-U220B Radiant Dip Switch Settings

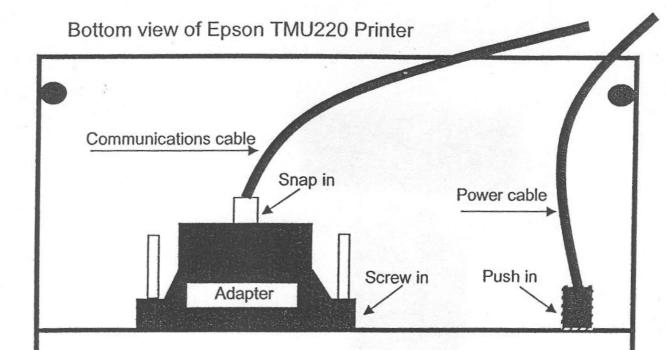

Installation Instructions

- Remove <u>old</u> printer by removing power cord from outlet and disconnecting communications cable from adapter.
- 2. Turn new printer upside down and place as shown.
- 3. Remove dip switch cover plate (1 screw).
- 4. Set dip switches as shown and reinstall cover plate.
- 5. Unscrew adapter from old printer and install on new printer.
- 6. Snap in communications cable into adapter
- 7. Install power cable into the round port in printer
- 8. Turn printer upright; install ribbon and paper.
- 9. Plug power cable in and turn on printer.

